

# ***STRONG***

LED TV with DVB-T2/C/S2  
SRT 32HB3003



User Manual  
Bedienungsanleitung  
Manuel utilisateur  
Manual del Usuario  
Инструкции за употреба  
Užívateľská príručka  
Korisnički priručnik  
Használati útmutató  
Manuale utente

Gebruiksaanwijzing  
Instrukcja obsługi  
Manual do Utilizador  
Manual de Utilizare  
Uputstvo za upotrebu  
Používateľská príručka  
Navodila za uporabo  
Руководство пользователя  
Посібник користувача

Fig.1a

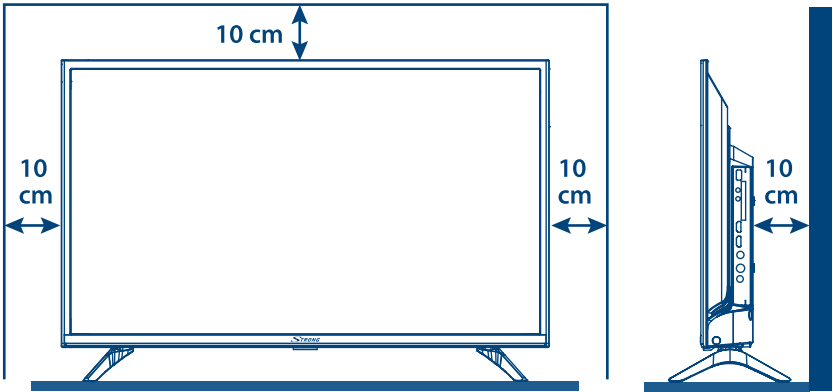


Fig.1b

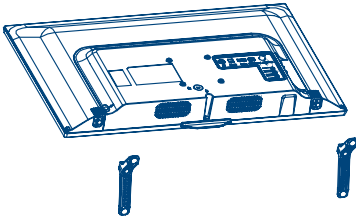


Fig.1c

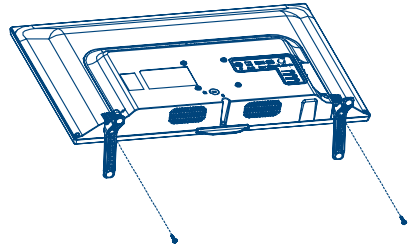


Fig.2

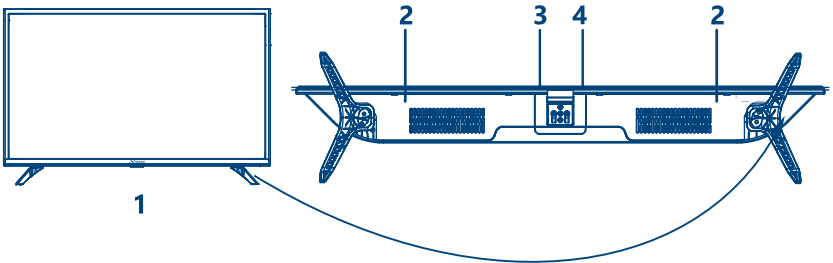


Fig.3

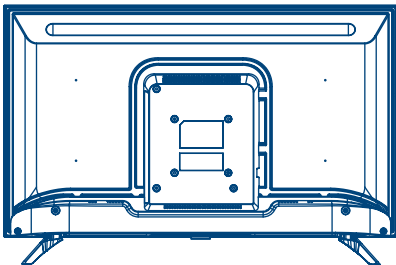


Fig.3a



Fig.3b

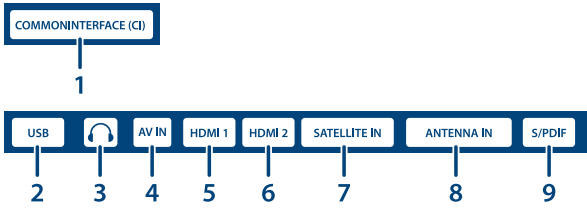


Fig.4


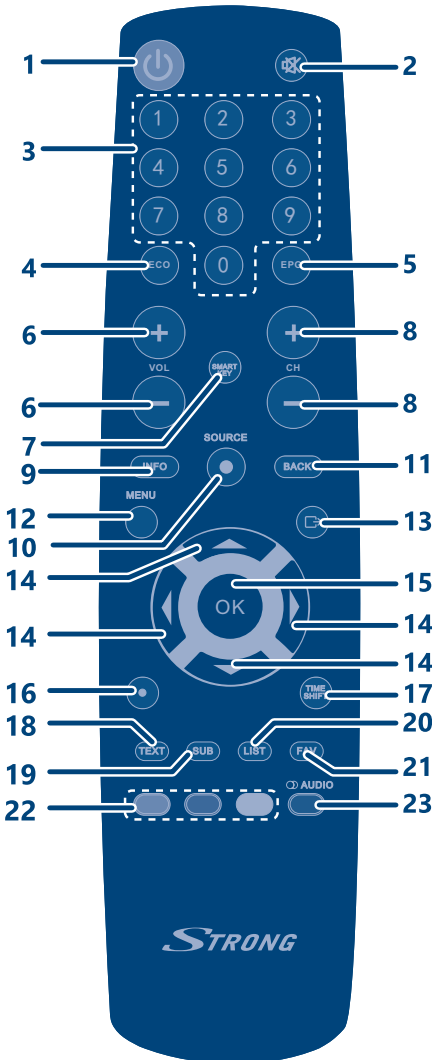


Fig.5

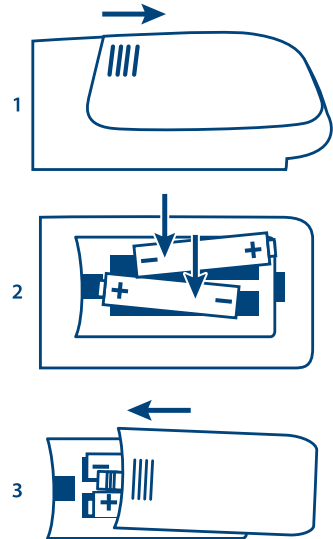

# SERVICE CENTER

<b>AT</b>	 <b>support_at@strong.tv</b>  0820 400 150 (€ 0,12/Min. österr. Festnetz)	<b>HU</b>	 <b>support_hu@strong.tv</b>  +36 1 445 26 10
<b>BG</b>	 <b>support_bg@strong.tv</b>  +359 32 634451	<b>IT</b>	 <b>support_it@strong.tv</b>  199 404 032 Da rete fissa 24,8 cent. al min. 12,5 cent. scatto alla risposta Da rete mobile max 49 cent. al min. 15,6 cent. scatto alla risposta
<b>CZ</b>	 <b>support_cz@strong.tv</b>  844 44 44 90	<b>NL</b>	 <b>support_nl@strong.tv</b>
<b>DE</b>	 <b>support_de@strong.tv</b>  0180 501 49 91 (€ 0,14/Min. deutsches Festnetz) (€ 0,42/Min. max. Mobilfunknetze)	<b>PL</b>	 <b>support_pl@strong.tv</b>  801 702 017
<b>DK</b>	 <b>support_dk@strong.tv</b>	<b>PT</b>	 <b>support_pt@strong.tv</b>  +351 2 100 06 125
<b>ES</b>	 <b>support_es@strong.tv</b>  +34 91 119 61 76	<b>SK</b>	 <b>support_sk@strong.tv</b>  0850 15 05 50
<b>FR</b>	 <b>support_fr@strong.tv</b>	<b>SL</b>	 +386 1 828 08 58
<b>HR</b>	 +385 1 344 57 66	<b>UA</b>	 <b>support_ua@strong.tv</b>  +380 (44) 238 61 50

[www.strong.tv](http://www.strong.tv)

Supplied by STRONG Austria  
Represented by STRONG Ges.m.b.H.  
Teinfaltstraße 8/4, Stock  
1010 Vienna, Austria  
Email: support\_at@strong.tv

**Licenses**

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM **MPEG LA, L.L.C.** SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to **Dolby Laboratories**. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

To obtain the best performance and safety, please read this manual carefully. Please keep this manual for future reference.

## TABLE OF CONTENTS

<b>1.0 INSTRUCTION</b>	<b>3</b>
1.1 Safety Instructions	3
1.2 Storage	4
1.3 Accessories	4
1.4 Equipment set-up	4
<b>2.0 INSTALLATION</b>	<b>5</b>
2.1 Default PIN code: 0000	5
2.2 Front panel/underside	5
2.3 Rear panel	5
2.4 Side panel	5
2.5 Remote control	6
2.6 Installing the batteries	6
2.7 Using the remote control	7
<b>3.0 FIRST TIME INSTALLATION</b>	<b>7</b>
3.1 DVB-S/S2 installation	7
3.2 DVB-T/T2 installation	8
3.3 DVB-C installation	8
<b>4.0 ELECTRONIC PROGRAMME GUIDE (EPG)</b>	<b>9</b>
<b>5.0 MENU SETTINGS</b>	<b>9</b>
5.1 Menu control (DTV mode)	9
5.2 Picture menu	9
5.3 Sound menu	10
5.4 Installation	11
5.5 Time menu	12
5.6 Setup Menu	12
5.7 Lock	13
<b>6.0 MEDIA ON USB</b>	<b>13</b>
6.1 Reminder when using the USB player	13
6.2 Media menu	13
<b>7.0 TROUBLESHOOTING</b>	<b>15</b>
<b>8.0 SPECIFICATIONS</b>	<b>17</b>
<b>9.0 APPENDIX</b>	<b>18</b>

### SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, STRONG declares that the radio equipment type LED TV is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.strong.tv/en/doc>




Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc in the United States and other countries. All product names are trademarks or registered trademarks of their respective owners.

© STRONG 2022. All rights reserved.

# 1.0 INSTRUCTION

## 1.1 Safety Instructions

Read all of the instructions before operating the set. Keep these instructions well for later use.

- Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).
- Please refer to the information on the exterior back enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mark  indicates a risk of electric shock. The external wires must be installed by an instructed person or ready-made leads or cords must be used.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from HEADPHONES and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. In case of damages, please get the power cord replaced by a similar one with the same specifications. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
-  To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- A USB terminal can provide a maximum of 500 mA.
-  Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

### Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp, and cold areas, protect the set from overheating.
- Keep away from direct sunlight.
- Do not use the set near dust place.
- Do not attach candle to accessible opening area, to avoid flammable foreign material from entering the TV.

## WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## 1.2 Storage

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

## 1.3 Accessories

- 1x installation instructions
- 1x safety instructions/warranty cards
- 1x remote control
- 2x AAA batteries

## 1.4 Equipment set-up

**Fig. 1a**

Install the display on a solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10 cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set. This apparatus can be used in tropical and/or moderate climates.

### Stand assembly instruction

**Fig. 1b**

1. Carefully place the TV with its front side facing down on a cushioned flat surface in order to protect the TV and the TV screen from damage.
2. Take out the 2x feet and assemble them to the TV.
3. Fasten the feet to the bottom of the TV using the 4x M4x15mm screws.

**Fig. 1c**

This user manual provides complete instructions for installing and using this TV. The symbols serve as follows.

<b>WARNING</b>	Indicates warning information.
<b>NOTE</b>	Indicates any other additional important or helpful information.
<b>MENU</b>	Represents a button on the remote control or the TV. <b>(Bold characters)</b>
<i>Move to</i>	Represents a menu item within a window. <i>(Italic characters)</i>



## 2.0 INSTALLATION

### 2.1 Default PIN code: 0000

### 2.2 Front panel/underside

Fig. 2

**NOTE:** The graphics are for representation only.

1. Power indicator /remote sensor
2. Speakers
3. Buttons: V-/V+, CH-/CH+.
4. Combo button; Input source, Menu, Standby/ON.

### 2.3 Rear panel

**NOTE:** The graphics are for representation only.

Fig. 3

1. **AC INPUT (FIXED CABLE)**  
Main power cable (180 - 240 V ~ 50/60 Hz)
2. **Vesa 100 x 100** 4 x screws holes to mount TV to wall.

**NOTE:** The graphics are for representation only.

Fig. 3a

1. ▲▼ Channel up/down button
2. ◀▶ Volume up/down button
3. ⏻/Menu Press to turn the TV on or standby/Enter Menu

### 2.4 Side panel

**NOTE:** The graphics are for representation only.






Fig. 3b

1. **COMMONINTERFACE (CI+)**  
Connect a Conditional Access Module (CAM).
2. **USB** Connect a USB device for playback of multimedia files
3. **HEADPHONES** Speakers will be muted when HEADPHONES is plugged in and headphone selected.
4. **AV IN** 3.5 mm female jack entry for composite video and left/right audio connection.

- 5. **HDMI 1** Connect HDMI input signal from a signal source such as DVD, Blu-ray player or game console.
- 6. **HDMI 2 (ARC)** Connect HDMI input signal from a signal source such as DVD, Blu-ray player or game console.
- 7. **SATELLITE IN** Connect a satellite dish to the TV for searching programmes.
- 8. **ANTENNA IN** Connect a terrestrial antenna or cable connection from your provider to the TV for searching programmes.
- 9. **S/PDIF (optical)** Use an RCA cable to connect your TV to a compatible digital amplifier or Home theatre set.

## 2.5 Remote control

**Fig. 4**

- 1.  Press to turn the TV on or standby.
- 2.  Press to mute or restore the volume.
- 3. **0~9** Choose channel directly.
- 4. **ECO** Screen brightness modes for energy saving
- 5. **EPG** Press to display the current EPG information in DTV mode.
- 6. **VOL +/-** Adjust the volume up or down.
- 7. **(-/-)** Change the maximum input programme digit
- 8. **CH +/-** Change programmes up or down. Big steps in Channel list.
- 9. **INFO** Display information about the current source.
- 10. **SOURCE** Select the input source mode. SAT/ DVBT/HDMI...
- 11. **RETURN** Press to go back to previous viewed channel.
- 12. **MENU** Open the menu options. Step back in some menu options.
- 13.  Exit the current menu or page.
- 14.  Navigate the menu or select channel list group
- 15. **OK** Confirm the selection or to call channel list.
- 16.  No function
- 17. **TIMESHIFT** No function
- 18. **TEXT** Press to enter or exit the Teletext menu.
- 19. **SUB** Enable/disable subtitles in DTV/USB mode.
- 20. **LIST** Press this button to call one or return to channel list  
Use / button select one.
- 21. **FAV** Press to view your assigned favourite list.
- 22. **COLOUR BUTTONS**  
Press to execute the prompt function in TV or DTV menu mode.
- 23. **AUDIO** Press to select available audio languages. Selecting audio description, a narrator will describe what is happening on the screen for blind or visually impaired viewers. Press again to turn it off (depending on broadcast).

## 2.6 Installing the batteries

**Fig. 5**

Place 2x AAA batteries in the battery compartment of the remote control. Make sure to match the polarity markings inside the compartment.

**NOTE:** Pictures are only for reference. Actual items may differ.

- Slide the cover horizontally.

- Put 2x AAA batteries in the compartment and make sure the polarity is correct.
- Slide horizontally to close the cover.

### Precautions for using the battery

Improper using of the battery will cause leakage. Carefully follow these instructions.

- Please note the batteries' polarity to avoid short circuit.
- When the battery's voltage is insufficient which affect the use range, you should replace it with a new battery. Remove the batteries from the remote control unit if you do not intend to use it for a long time.
- Do not use different types of batteries (for example Manganese and Alkaline batteries) together.
- Do not put the battery into fire, and charge or decompose the battery.
- Please dispose batteries abide by relevant environmental protection regulation.

## 2.7 Using the remote control

- Use the remote control by pointing it towards the remote sensor. Items between the remote control and the remote sensor could block normal operation.
- Do not cause the remote control to vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in a high humidity place.
- Do not place the remote control under direct sunlight which will cause deformation of the unit by heat.
- When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. If so, please change the lighting or TV's position, or operate the remote control closer to the remote sensor.

## 3.0 FIRST TIME INSTALLATION

After all connections have been made properly, switch on your TV. Insert the main power plug into the wall outlet, now the red LED light should light up. Press the  $\odot$  button on your remote control to wake the TV up. The language and country selection will appear on the screen. Use  $\blacktriangleleft$   $\blacktriangleright$  to select the *OSD Language* of your preference. Use  $\blacktriangleup$   $\blacktriangledown$  to select the *Country* and use  $\blacktriangleleft$   $\blacktriangleright$  again to select the region you are using this TV. This country/region selection is an important setting, it will set the time zone and will try to sort region channels at first or in a specific order.

If all settings are made, confirm with **OK** on your remote control and follow the next steps.

On the next screen, you can select which tuner you like to use and which channels you'd like to search for. Choose *Tuner Type* and by pressing  $\blacktriangleleft$   $\blacktriangleright$  you can choose between *DTV*, *ATV* or *DTV + ATV* (DTV to search digital broadcasts; ATV to search analogue broadcasts). After you made your selection, press  $\blacktriangledown$  to proceed to *Digital type*. In this menu you can select which input source you would like to use:

- *Satellite* to receive satellite broadcasts (if you are equipped with a satellite dish)
- *DVB-T* to receive terrestrial broadcasts (by using indoor or outdoor antenna)
- *DVB-C* to receive cable broadcasts. (Connection to cable outlet box)

Then the next screen appears depending from the tuner selection you choose.

## 3.1 DVB-S/S2 installation

### Satellite Setting

Press  $\blacktriangleleft$   $\blacktriangleright$  to select the satellite your dish is aimed at. Use the  $\blacktriangleleft$   $\blacktriangleright$   $\blacktriangleup$   $\blacktriangledown$  buttons to change settings for your satellite installation for each specific satellite.

## Channel Search

Press ▲▼◀▶ to highlight the options of choice and press **OK** to start the channel search.

<i>Scan Mode</i>	Choose between <i>Default</i> (recommended), <i>Blind Scan</i> and <i>Network</i> and <i>Fast Scan</i>
<i>Channel Type</i>	Select <i>Free</i> to search Free-To-Air channels only, Select <i>Scramble</i> to search Encrypted channels only, <i>All Channels</i> to search FTA and Encrypted channels.
<i>Service Type</i>	Select <i>DTV</i> to search Digital TV channels only, <i>RADIO</i> to search radio channels only or <i>All</i> for a complete search.

It is recommended to use the default settings.

**NOTE:** Fast Scan option allows you to load pre-installed channel list from some providers. This selection list appears when you have chosen Fast Scan and confirm with **OK** button.

## 3.2 DVB-T/T2 installation

### Terrestrial Setting

Here you only need to press **OK** to start searching.

All settings are automatically set by country selection you made in first step.

**NOTE:** If you have an active antenna, please check the user manual of the antenna for external power supply. The TV can NOT supply power used for an active antenna.

## 3.3 DVB-C installation

### Cable Setting

Press ▲▼◀▶ to highlight your settings.

<i>Scan type</i>	You can select <i>Network Scan</i> or <i>Full</i> . (Default <i>Network Scan</i> for quick search advised).
------------------	---

**NOTE:** *Full scan* will have a duration of approximately 20 minutes, depending on your cable network.

<i>Network ID</i>	Please enter (with 0 ~ 9) the used <i>Network ID</i> from your provider.
<i>Frequency</i>	Please enter (with 0 ~ 9) the main frequency used by your provider in KHz.
<i>Symbol</i>	Please enter (with 0 ~ 9) the used <i>Symbol</i> from your provider. (Ks/s)

**NOTE:** Please check the settings for your cable system used by your provider!

Press **OK** to continue and to start search process.

**Crypted**

Select *FTA Channels* to search Free-To-Air channels only or *All Channels* to search FTA and encrypted channels

Press ▲▼◀▶ to highlight the country that you want to install, then press **OK** to start searching.

If all went well with auto channel installation, your TV will start to play on first channel.

We hope you will enjoy it for many years.

## 4.0 ELECTRONIC PROGRAMME GUIDE (EPG)

EPG stands for Digital Electronic Programme Guide. It is supplied by the programme providers and offers information on broadcasted programmes. You can access it in digital mode by pressing **EPG** on the remote control. Press **EPG** to bring up the EPG interface. Use ▲▼ to select a programme. Use ◀▶ to select an event from one channel. Press **INFO** to see more details from selected event. If you like this event and want to set a reminder. Just press **OK** or **GREEN** button and reminder is set. You can set even Timer for this event 1 x time/Daily/Weekly/Always just be repeating this button. This Timer overview is in menu to find under name *Schedule List*.

Then press the **COLOUR BUTTONS** for entering the required settings.

<b>GREEN</b>	Set reminder or timer for event
<b>YELLOW</b>	Previous day EPG overview
<b>BLUE</b>	Next day EPG overview

## 5.0 MENU SETTINGS

Below items depend if they are available of select input source. Use **SOURCE** button to select other input source. The selections under this button are, Satellite, DTV, ATV, AV, HDMI 1, HDMI 2 and Media.

### 5.1 Menu control (DTV mode)

Press **MENU** to enter the main menu. Press ◀▶ to select an item. Press ▲▼ and **OK** to select the submenus. Press **MENU** to exit the item.

### 5.2 Picture menu

<i>Picture Mode</i>	Select the automatic picture control mode. Available choices are <i>Dynamic, Standard, Mild</i> and <i>Personal</i> .
<i>Colour Temperature</i>	Select the overall colour tone of the picture. Available choices are <i>Cool, Normal</i> and <i>Warm</i> .
<i>Noise Reduction</i>	Eliminates noise in the picture. Available choices are <i>Off, Low, Middle, High</i> and <i>Default</i> .
<i>Aspect Ratio</i>	Select the aspect ratio (display proportions) according to your video signal type or preference. Available choices are <i>Auto, 4:3, 16:9, Zoom 1</i> and <i>Zoom 2</i> . <b>Note:</b> Some options may not be available under some sources.

In the *Personal* mode, settings can be changed for *Brightness, Contrast, Colour* and *Sharpness*.

#### 5.2.1 Contrast/Brightness/Colour Tint/Sharpness

If *Picture Mode* is set to *Personal* you are able to change the following settings

Press ▲▼ to select an option, then press ◀▶ to adjust.

<i>Contrast</i>	Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.
<i>Brightness</i>	Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.
<i>Colour</i>	Adjust the saturation of the colour based on your own preference.
<i>Tint</i>	No function
<i>Sharpness</i>	Adjust the peaking in the detail of the picture.

## 5.2.2 Colour Temperature

In this menu you can change the overall colour cast of the picture.

Press ▲▼ to select *Colour Temperature*, then press **OK** to enter a sub-menu. Press ▲▼ to select the relevant picture effect (DEFAULT: *Cold Normal Warm*).

<i>Cold</i>	Increase the blue tone for the white.
<i>Normal</i>	Increase the neutral colours for the white.
<i>Warm</i>	Increase the red colour for the white.

## 5.2.3 Noise Reduction

In this menu you can filter out and reduce the image noise and improve picture quality. Press ▲▼ to select *Noise Reduction*, then press **OK** to enter a sub-menu.

<i>Off</i>	Select to turn off video noise detection.
<i>Low</i>	Detect and reduce low video noise.
<i>Middle</i>	Detect and reduce moderate video noise.
<i>High</i>	Detect and reduce enhanced video noise.
<i>Default</i>	Set as Default.

## 5.3 Sound menu

<i>Sound Mode</i>	Select your favourite sound mode for each input. Choices are <i>Standard, Music, Movie, Sports</i> and <i>Personal</i> .
<i>Enjoy Music</i>	Turns off the screen or switch to music source when it will be found on HDMI input.
<i>Auto Volume</i>	Adjust the volume corresponding to the input audio level. Options are <i>On</i> and <i>Off</i> .
<i>S/PDIF Type</i>	If you have connected S/PDIF output to digital home audio system. You can select "Auto" to output Dolby audio* automatically. If channel have this audio channel. Selection <i>PCM</i> is only stereo audio and <i>Off</i> is to switch off this output.
<i>AD Switch</i>	Turn on the <i>Audio</i> description, you can activate the setting of AD volume. When turn on the audio description, a narrator will describe what is happening on the screen for blind or visually impaired viewers. (Only if available in DTV mode.)

\* Availability depending on broadcaster

## 5.4 Installation

Press **MENU** to display the main menu. Press **▲▼** to select *Search* in the main menu. Press **OK** it access and press **▲▼** to select the option you wish to adjust in the *Search* menu. Press **OK** to enter and to adjust.

Below items depend if they are available of select input source. Use **SOURCE** to select other source.

### 5.4.1 Auto Tuning

Press **▲▼** to select *Auto Tuning*, select the *Region Tune Type* and proceed with **OK**. If you use *DTV* as input source, you can switch between *DVB-T Terrestrial* and *DVB-C Cable*. If you use *Satellite* as input source, you can select the satellite you dish are pointing to and how want to search for.

### 5.4.2 Dish Setup (Satellite)

The *Dish Setup* menu allow you to set you satellite and belonging settings as DiSEqC port(s) and LNB type. Also you can select motor support and GoTo-X function. Afterwards you may start the *Auto Tuning* or *Manual Tuning* by selecting with *EPG* button the wanted transponder.

### 5.4.3 DTV Manual Tuning (in DVB-T mode only)

Search and store programmes manually. Press **▲▼** to select *DTV Manual Tuning*. Then press **OK** to enter the sub-menu.

Press **◀▶** to select a *Channel No.*, and then press **OK** to start the search. The search stops when a programme is found and this programme will be stored in the current channel position. If you want to stop the search, press **MENU**.

### 5.4.4 ATV Manual Tuning (in DVB-C mode only)

First select the source type of ATV. Then in the *Installation* menu, select *ATV Manual Tuning* and press **OK** to access. Highlight and press **▲▼** to select *Current CH 1* (maybe other number), *Sound System* and *Channel No.*. Then select *Search* and press **OK** to start the search. Press **▶** for the unit to search towards higher frequency. Press **◀** for the unit to search towards lower frequency. The search stops when a programme is found and this programme will be stored in the current channel position. If you want to stop the search, press **MENU**.

<i>Current CH</i>	Set the channel number
<i>Colour System</i>	Select the colour system (Available: AUTO, PAL, SECAM)
<i>Sound System</i>	Select the Sound system
<i>Fine-Tune</i>	Adjust the frequency of the channel
<i>Search</i>	Start the channel search

### 5.4.5 Channel extra settings

*Programme Edit* Edit the programmes. You can press the **COLOUR BUTTONS** on the remote control to skip programmes, rename and delete programmes or move programmes, and add programmes to the favourite list by pressing **FAV**.

#### NOTE:

Some regions are using automatically channel sorting and numbering (LCN). Which make renumbering of channels by sorting and deleting of channel list not possible. This will auto selected by country selection.

<i>Schedule List</i>	Press <b>▲▼</b> in the <i>Channel</i> . Select <i>Schedule List</i> , then press <b>OK</b> to enter the sub-menu. Use the <b>COLOUR BUTTONS</b> to modify your settings.
<i>Signal Information</i>	Showing the information of current DTV channel. Only available with DTV signal.
<i>CI information</i>	Enables the user to watch and change settings of CAM modules and check values from inserted smart card.

## 5.5 Time menu

Press **MENU** to display the main menu. Press **▲▼** to select *TIME* in the main menu. Press **OK** to do further adjustments. Press **OK** to return to the previous menu.

<i>Clock</i>	The time is automatically obtained from the channel transmission and doesn't have to be set manually. Should this function not be provided by the broadcaster, it is possible to set it by pressing <b>OK</b> and set date and time by pressing <b>▲▼◀▶</b> .
<i>Time Zone</i>	Press <b>▲▼</b> to select <i>Time Zone</i> and confirm with <b>OK</b> .
<i>Sleep Timer</i>	Press <b>▲▼</b> to select <i>Sleep Timer</i> . Available Options: <i>Off, 10 min., 20 min., 30 min., 60 min., 90min., 120 min., 180 min. and 240 min..</i>
<i>Auto Standby</i>	This function allows you to set the automatic shutdown of your TV. Choose between <i>3H, 4H, 5H or Off</i> to disable this function.
<i>OSD Timer</i>	This function allows you to choose how long the info banner is displayed. Choose between <i>5s, 15s or 30s</i> .

## 5.6 Setup Menu

<i>Language</i>	Select the <i>Menu OSD language</i> of your choice. The default setting is <i>English</i> . Press <b>▲▼</b> to select the menu language and confirm with <b>OK</b> .
<i>TT Language</i>	Select the <i>TT language</i> of your choice of character set of TeleText.
<i>Audio Languages</i>	Press <b>▲▼</b> to select your chosen <i>Audio Language</i> , then press <b>OK</b> .
<i>Subtitle Language</i>	Press <b>▲▼</b> to select your chosen <i>Subtitle Language</i> , then press <b>OK</b> .
<i>Hearing Impaired</i>	Select this option to switch audio track Hearing Impaired to on. Options are <i>On</i> and <i>Off</i> .
<i>Media File System</i>	Select this option to see the format of USB device. Also you can format to FTA 32 your device. Please, be a wear that all your data will be deleted.
<i>Blue Screen</i>	Select this option to switch on a blue screen if there is no signal on the input. Options are <i>On</i> and <i>Off</i> .
<i>First Time Installation</i>	If you like to install channels again as you move to other area. Select this option and follow the screen instructions. All installed channels from before will be deleted.
<i>Software Update (USB)</i>	Press <b>OK</b> and use <b>◀▶</b> to select <i>Yes</i> if you want to update the software or <i>No</i> to go back to the main menu. For more information see also chapter <b>6.2.4</b> .
<i>T-Link</i>	With this option you can set CEC function ON/OFF. With the CEC function, your other devices (if they support CEC function) that are connected to the HDMI1 port can be operated with one remote control.
<i>SW information</i>	SW information of TV appears in this menu



## 5.7 Lock

Press **MENU** to display the main menu. Press **▲▼** to select the *Lock* menu settings. Press **OK** to do further adjustments. Press **▲▼** to select the options. The following options are available:

<i>System Lock</i>	This option allows you to enable or disable the password protection. Press <b>OK</b> to set this function <i>On</i> or <i>Off</i> .
<i>Set Password</i>	The default password is <b>0000</b> , to customize the password press <b>OK</b> and follow the instruction within the menu.
<i>Channel Lock</i>	This option allows you to prevent viewing of one or more channels. Press <b>OK</b> to display the channel list and select with <b>▲▼</b> the channel you want to be locked. Press <b>GREEN</b> to lock it. Consider the same procedure to lock other channels if needed.
<i>Parental Guidance</i>	Press <b>OK</b> to enter and set the age for suitable programmes for children, then press <b>▲▼</b> .

## 6.0 MEDIA ON USB

### 6.1 Reminder when using the USB player

1. Some USB storage devices may not be compatible to operate smoothly with this TV.
2. Back up all of the data in the USB storage device in case data is lost due to an unexpected accident. STRONG does not assume any liability for the losses by misuse or malfunction. Data backup is consumer's responsibility.
3. For large file sizes, the loading speed may be slightly longer.
4. The recognition speed of a USB storage device may depend on each device.
5. When connecting or disconnecting the USB storage device, make sure the TV is not in USB mode otherwise the USB storage device or the files stored in it may be damaged.
6. Please use only a USB storage device which is formatted in FAT16, FAT32, NTFS (playback only) file system provided with the Windows operating system. In case of a storage device formatted as a different utility programme which is not supported by Windows, it may not be recognized.
7. When using a USB Hard Disk Drive which is not powered independently, ensure its power does not exceed 500 mA. Otherwise the TV system will change into standby mode, and you must pull out the USB Hard Disk and restart the TV system.
8. An "Unsupported File" message will be displayed if the file format is unsupported or the file is corrupted.
9. FHD big picture needs longer time to process, which is not caused by the TV. Please be patient.
10. This TV may not support some multimedia files changed and upgraded as the change of the encoding format or other technical aspects advances.
11. Please refer to chapter **9. Appendix** for a list of supported file formats for USB playback.

### 6.2 Media menu

Press **SOURCE** and select *Media*. You can view movie, music and photo files from your USB storage devices. Connect a USB storage device to the USB input terminal and select the types of media on the home page: *Movie*, *Music* and *Photo*. Press **OK**, the screen will show the connected USB device, press **OK** again to view the file folders and files. Press **▲▼** or **◀▶** to select a folder, press **OK** to open the folder and select the files. Highlight the one you want to play or watch or press directly **▶ ||** to start playing directly. Press **■** to stop playing and return to upper level folder. Continuously press **RETURN** to go back to upper level folder. Repeat again to select and play another media type.

**NOTE:**

By choosing one of the three media types, for example *Movie*, the folders inside will display only video files and no other formats.

## 6.2.1 Play movies

**Fig. 6**

During playback, press **INFO** or **OK** to display/exit the menu bar (Fig. 6). Press ◀▶ on the remote control to do relevant operations and start function with **OK**.

*Play & Pause/Stop/Prev./Next*

Press ▶|| to play or pause the playback. Press ■ to stop playing. Press ◀▶▶▶ to play the previous or the next video file. Press **INFO** and use ◀▶ to highlight the corresponding icon on the control bar, then press **OK**. The TV will response accordingly.

*Fast Reverse/Fast Forward*

Press and hold ◀▶▶▶ for seconds to draw the playing progress as your desire, then press ▶|| to start the playing from the new position..

*Information*

Highlight the corresponding icon and press **OK** to view the information of the playing video.

*Capture*

Highlight the button and press **OK** to capture a screen shot to USB device.

## 6.2.2 Play music

**Fig. 7**

Press **INFO** or **OK** to display/exit from the menu bar (Fig. 7). Press ◀▶ on the remote control to do relevant operations and start function with **OK**.

*Play & Pause/Stop/Previous/Next*

Press ▶|| to play or pause the playback. Press ■ to stop playing. Press ◀▶▶▶ to play the previous or the next music file. Press ◀▶ to highlight the corresponding icon on the control bar, and then press **OK**. The TV will response accordingly.

*Fast Forward/Fast Reverse*

Press and hold ◀▶▶▶ for seconds to draw the playing progress as you wish, then press ▶|| on the remote control to start playing from the new position.

*Repeat*

Highlight the icon and press **OK**. You can select 3 different modes: *None* to disable the function, *1* to repeat one track only and *All* to repeat the entire list once it is finished.

*Information*

Highlight the icon and press **OK** to check the information of the playing music.

**NOTE:**

- If one (or more) file(s) of the play list is selected, the buttons ◀▶▶▶ will play only selected files.
- This menu only shows supported files.
- Files with other file extensions are not displayed, even if they are saved on the same USB storage device.
- An over-modulated mp3 file may cause some sound distortion during playback.

- This TV supports lyrics display (in English). The maximum number of characters per line is 48.
- The file name of music and lyrics must be the same in order to display lyrics while the music is playing.
- If you want to show the associated lyrics on the screen with the music, you must store these in the same folder using the same file name with “.lrc” file extensions.

### 6.2.3 Browse photos

**Fig. 8**

Press during viewing **INFO** or **OK** to display/exit from the menu bar (Fig.8).

*Play & Pause/Stop/Previous/Next*

Press ► || to play or pause the playback. Press ■ to stop playing. Press ◀▶ to show the previous or the next picture. Press ◀▶ to highlight the icon on the control bar, and then press **OK**. The TV will response accordingly.

*Rotate*

Highlight the icon in the menu bar and press **OK** to rotate the picture 90 degrees clockwise or counter clockwise.

*Info*

Highlight the button and press **OK** to check the information of the shown photo.

*Zoom In/Zoom Out*

Highlight the icon on the menu bar and press **OK** to zoom in or zoom out of the image.

*Move View*

When the image is magnified, use this function for convenient check. Highlight this icon, press **OK**, then press ◀▶▲▼ to move the image.

**NOTE:** The move function ↑↓ is only available when the image is enlarged.


### 6.2.4 Software update via USB

From time to time you can check if there is an improved software version available. This can be viewed and downloaded from our website [www.strong.tv](http://www.strong.tv). Search the model number on our website's service support section. If there is an improved software version you can download the file and copy it to the root of a USB device. Then press ▲▼ button to select *Software Update (USB)* from the *SETUP* menu on your TV. Afterwards plug your USB device into the USB slot and press **OK** to update the respective software. Confirm with *Yes* using ◀▶. When the update is completed, remove the USB stick, disconnect your device from the main power supply and plug in again.

## 7.0 TROUBLESHOOTING

There maybe various reasons for abnormal operation of your TV set. Check your TV set according to the general procedures shown below. Additionally, we strongly recommend reading the detailed troubleshooting of your TV set in the full user manual available on our website [www.strong.tv](http://www.strong.tv). If your TV set does not work properly after checking the general and detailed troubleshooting, please contact your dealer, the local Service Hotline, or send an email to our support via [www.strong.tv](http://www.strong.tv). **DO NOT** try to open or disassemble your TV set. It may cause a dangerous situation and the warranty will be void.

Problem	Possible cause and solution
The LED/Standby indicator does not light up	<ol style="list-style-type: none"> <li>1. Check whether the power connector is completely plugged at the TV and into power socket.</li> <li>2. Make sure that the switch on multipoint connectors is switched ON as well.</li> <li>3. The electrical outlet may be damaged.</li> <li>4. STBY LED is defective.</li> </ol>
No Signal	<ol style="list-style-type: none"> <li>1. The TV is not connected to a signal source (DVB-C, DVB-S/S2 or DVB-T/T2) or the antenna (terrestrial or satellite antenna) is maybe not aligned correctly respectively the according connection and distribution equipment might show malfunction, incompatibility or defectives.</li> <li>2. DVB-T/T2: Active antennas need antenna power switched ON or external power connected.</li> <li>3. Antenna is maybe out of digital signal reception in your area. Check reference from service providers about coverage.</li> <li>4. DVB-S/S2: Incorrect values of some tuner parameters (e.g. one or some channel(s) changed to another transponder or are no longer emitted).</li> <li>5. Incorrect values of LNB parameters.</li> </ol>
The picture and sound remain frozen, or macro blocks or similar distortion are visible on the screen.	<p>DVB-S/S2,DVB-T/T2: The reception signal is too weak or disturbed by electromagnetic, high-frequency, or other interference signals. DVB-T/T2 : Disturbances caused by signal reflections.</p> <p>DVB-C, DVB-S/S2: The connection cables at the signal source are too long (too high attenuation).</p> <p>DVB-T/T2, DVB-S/S2: The antenna is not properly adjusted or got misaligned after storm etc.</p>
Any other reception or signal related problems	<ol style="list-style-type: none"> <li>1. Generally cables might have loosened. Moisture might have entered into cables or connectors. There is heavy rain or heavy storm at present (DVB-S/S2 and -T/T2). Check the cable connections. DVB-S/S2 and -T/T2: Check all equipment connected between the reception point and the TV.</li> <li>2. Wait until heavy rain/thunderstorm passed. If no solution ask a local satellite specialist for advice.</li> <li>3. DVB-S/S2: The satellite dish is NOT aligned to the (correct) satellite(s). Ask a local satellite specialist for advice.</li> <li>4. DVB-S/S2: Satellite dish is too small. Trees or buildings are in path. Ask a local satellite specialist for advice.</li> <li>5. DVB-S/S2: Signal is too strong, maybe need to be attenuated. Ask a local satellite specialist for advice.</li> </ol>
No colour	<ol style="list-style-type: none"> <li>1. Devices are not properly connected (scart, RCA sockets) or wrong/bad cables are used.</li> <li>2. Adjust the saturation.</li> <li>3. Switch TV on another channel. It is possible that the current programme is broadcast in black and white.</li> </ol>
No picture, normal sound	<ol style="list-style-type: none"> <li>1. Adjust the brightness and contrast</li> <li>2. Radio channel is tuned to or the programme is not transmitting Video signals or another broadcasting interference/failure.</li> </ol>

Problem	Possible cause and solution
Normal picture, no sound	<ol style="list-style-type: none"> <li>1. Press the volume up button to increase the volume level.</li> <li>2. Audio is muted, press  to restore the sound.</li> <li>3. If external devices are used to loop the sound through, make sure to select correct sources and correct sound mode, for details also check advices in User Manuals from connected devices</li> <li>4. Maybe a channel w/o audio is tuned to (demo) or the programme is not transmitting audio signals or there is some other transmission interference/failure.</li> </ol>
Playback of video is causing picture freeze/ macro blocks or similar distortion, especially on HD content.	Read/write speed of your USB device could be too low. Make sure to use a USB storage device with sufficient speed and space. Pen drives (USB sticks) may not support sufficient speed.
The remote control does not work	<ol style="list-style-type: none"> <li>1. Change the batteries. If you're using rechargeable ones take care to use such with low self-discharge</li> <li>2. The batteries are not installed correctly or the types have been mixed</li> <li>3. IR Sensor is blocked or maybe interfered from bright light</li> </ol>
The TV switches off after a certain time	Switch ON the TV and check settings for automatic STBY function, by default the TV switches OFF after 4 hours to fulfil European low power regulations and help you to save energy.

**NOTE:**

If the problem persists after these solutions, please contact your local support centre or send a support mail via our website [www.strong.tv](http://www.strong.tv).

## 8.0 SPECIFICATIONS

### Audio

Audio Output: 5 W + 5 W

### Video

Channel coverage: DVB-T2: 174 MHz-230 MHz; 470 MHz-860 MHz

DVB-C: 50-858 MHz

DVB-S2: 950 MHz-2150 MHz

System: DTV: DVB-T2, DVB-S2, DVB-C (Support H.265 L4.1)

ATV: PAL/SECAM (BG/DK/1)

AV: PAL, NTSC, SECAM

### Connectors

1x ANTENNA IN

1x SATELLITE IN

1x COMMONINTERFACE (CI+)

2x HDMI

2x USB

1x S/PDIF (optical)

1x AV IN (Jack 3.5mm)

1x HEADPHONES (Jack 3.5mm)

## General Data

Operating voltage:	180 ~ 240 V AC 50/60 Hz
Power consumption:	max. 50 W, typ. 31 W
Power consumption in standby:	0.5 W
Operating temperature:	+5 °C ~ +35 °C
Storage temperature:	-15 °C ~ +45 °C
Operating humidity:	20% ~ 80% RH, non-condensing
Storage humidity:	10% ~ 90% RH, non-condensing
Dimensions (WxDxH) in mm:	732 x 182 x 477
Net-weight:	4.25 kg

## 9.0 APPENDIX

USB file playback support.

### Video

File Type/(Ext Name)	Video Type	Audio Type	Remark
MP4, MOV/(.mp4, .mov, .m4v)	Motion JPEG MPEG-4 SP/ASP (XviD)	MPEG-AUDIO	
AVI/(.avi)	MotionJPEG MPEG-4 SPIASP (XviD)	LPCM MPEG-AUDIO	
ASF(.wmv3, .xvid)	MPEG-4 SPIASP (XviD)	MS-ADPCM, Intel-ADPCM	
MKVI(.mkv, .xvid)	MPEG-4 SPIASP (XviD)	MPEG-AUDIO	
TSITP	.tsltrp	LPCM MPEG-AUDIO	
DAT, MPG,MPEG/(.dat,.mpg,mpeg)		LPCM MPEG-AUDIO	
VOB/(.vob)			
Flash Video	FLV		
H.263, H.264, H.265			

### Music

File Type/(Ext Name)	File Extension	Version support	Remark
Mpeg-1 Layer 3	mp3	LPCM	
WAVE	wav		
Audio Coding 2	AC3		
Ogg Media	.ogg, .ogm, .oga, .ogv, .ogx		

### Photo

File Type	File Extension	Version support	Remark
JPEG/ BASELINE JPEG/ HD JPEG	jpg/jpeg		

File Type	File Extension	Version support	Remark
BMP	bmp		support all modes
PNG	png		support interlace does not support animation mode